

Unplug unit
Set jumper on SW2
Plug unit into USB
Launch hidbootloader
Point to downloaded hex file
Click Program/Verify
When complete, unplug unit from USB
Remove jumper from SW2
Replug unit

